


UNITAIRE IV FAN COIL UNITS CRFR & CRFB

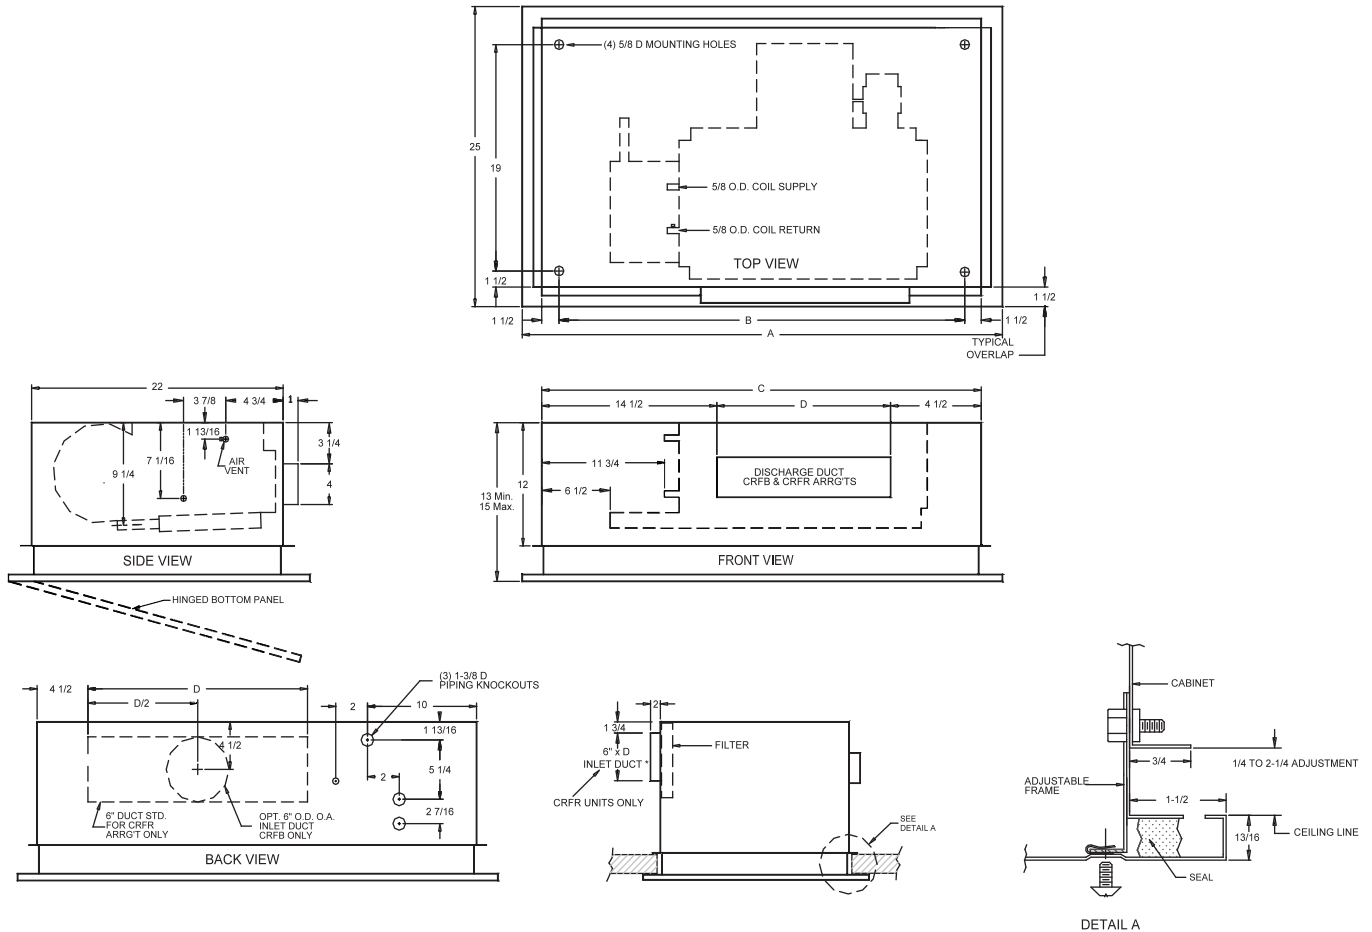


**LEFT HAND PIPING CONNECTIONS SHOWN. RIGHT HAND OPPOSITE. PIPING HAND DETERMINED WHEN FACING AIR OUTLET.
 STANDARD LOCATION OF THE ELECTRICAL JUNCTION BOX IS ON THE SAME SIDE AS THE PIPING.
 ELECTRIC JUNCTION BOX LOCATION MAY VARY DEPENDING UPON CONTROL REQUIRMENTS. CONTACT FACTORY.**


DIMENSIONS				
UNIT SIZE	A*	B	C	D
02	42	36	39	20
03	48	42	45	26
04	52	46	49	30
06	66	60	63	44
08	78	72	75	56
01/12	98	92	95	76

* = When units are furnished with electric heat or DDC controls, add 4" to "A" dimension.

OPTIONAL 1-ROW AUXILIARY HEATING COIL

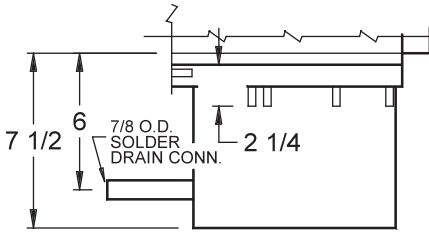

TOP VIEW

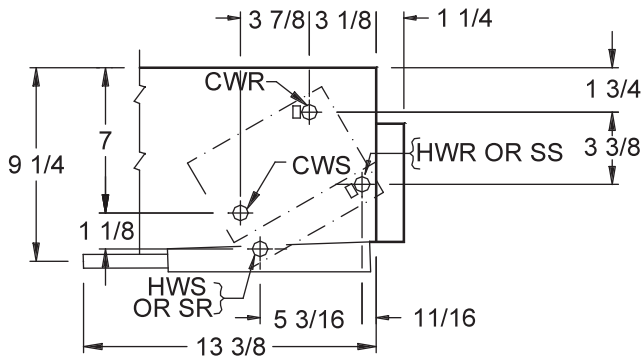

LEFT HAND VIEW

LEGEND

CWS-CWR: Chilled Water Supply – Return
 HWS-HWR: Hot Water Supply - Return
 SS-SR: Steam Supply – Return

SPECIAL NOTES

1-Row Auxiliary Water Coil Connections may be “Same As” or “Opposite” Cooling Coil Piping.

Contact factory if opposite end connections are required.

1-Row Auxiliary Steam Coil contact factory.

CONTROL PACKAGES

Control Packages require Engineering Investigation for confirmation of adequate space allowance.

Coil connections are 5/8” O.D. sweat

