

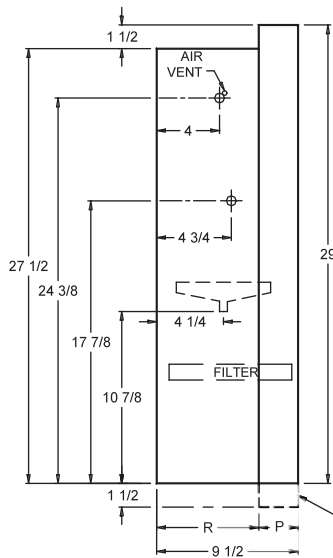


UNITAIRE IV FAN COIL UNITS

FTFF, WTFF, FFFF, WFFF, FSFF & WSFF

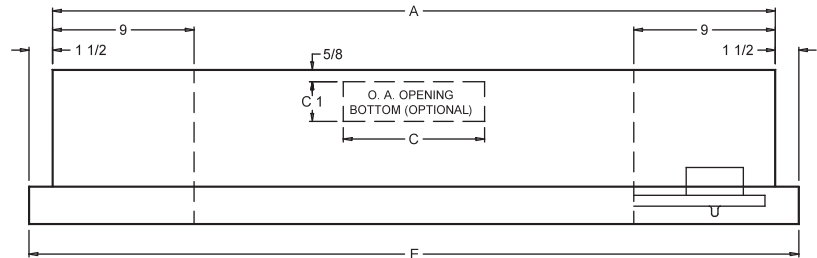


WFFF
 WSFF
 ONLY

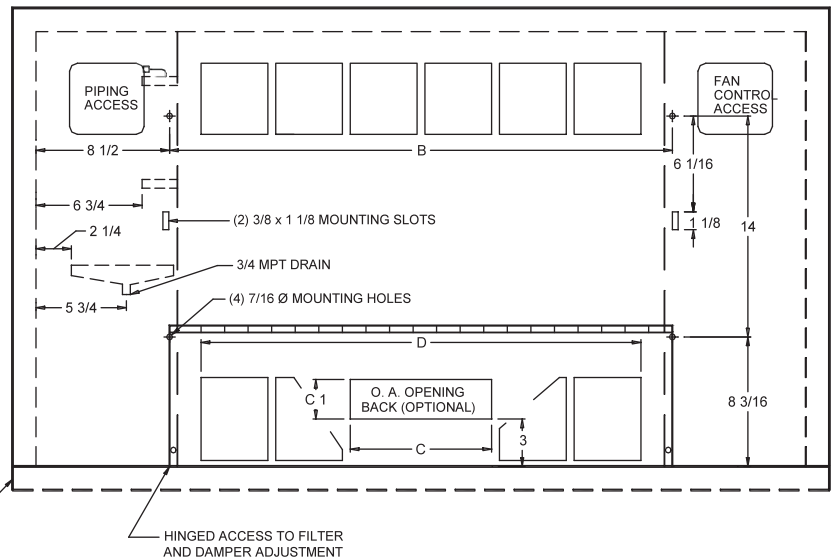


LEFT HAND PIPING CONNECTIONS SHOWN. RIGHT HAND OPPOSITE. PIPING HAND DETERMINED WHEN FACING AIR OUTLET
 ELECTRIC JUNCTION BOX LOCATION MAY VARY DEPENDING UPON CONTROL REQUIREMENTS. CONTACT FACTORY.

DIMENSIONS												
UNIT SIZE	A	B	25% O.A. INTAKE		D	E	FTFF WTFF		FFFF WFFF		FSFF WSFF	
			C	C1			P	R	P	R	P	R
02	39	22	9	2-1/2	19-3/4	42	6-1/2	3	4-1/2	5	2-1/2	7
03	45	28	9	2-1/2	23-3/4	48	6 1/2	3	4-1/2	5	2-1/2	7
04	49	32	15	2-1/2	27-3/4	52	6-1/2	3	4-1/2	5	2-1/2	7
06	63	46	15	2-1/2	43-3/4	66	6-1/2	3	4-1/2	5	2-1/2	7
08	75	58	27	2-1/2	55-3/4	78	6-1/2	3	4-1/2	5	2-1/2	7
01/12	95	78	27	2-1/2	N/A	98	6-1/2	3	4-1/2	5	2-1/2	7

OPTIONAL 1-ROW AUXILIARY HEATING COIL

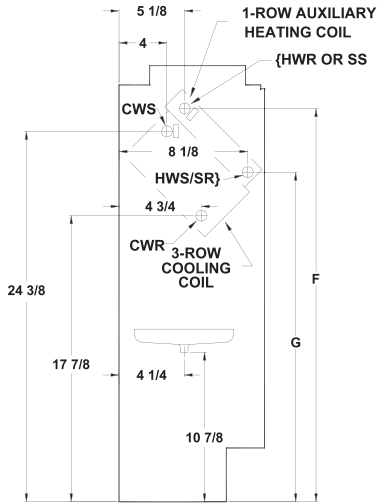

LEFT END VIEW

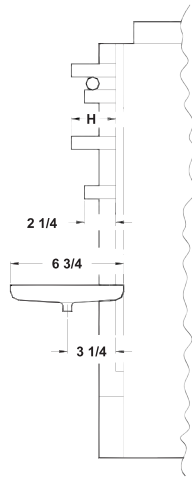

FRONT VIEW

LEGEND

CWS-CWR: Chilled Water Supply – Return
 HWS-HWR: Hot Water Supply - Return
 SS-SR: Steam Supply – Return

SPECIAL NOTES

1-Row Auxiliary Steam or Water Coil Connections may be “Same As” or “Opposite” Cooling Coil Piping. If “Opposite” is selected, the fan speed control must be located on the chilled water side or located remote from the unit.

CONTROL PACKAGES

Control Packages require Engineering Investigation for confirmation of adequate space allowance.

DIMENSIONS

DIMENSIONS (In.)			
UNIT SIZE	F	G	H
02			
03	25-1/2	20-5/16	2
04			
06			
08	25-3/8	20-7/16	3
01			
12			

Coil connections are 5/8" O.D. sweat

