



# Twin-Flo III<sup>®</sup>

## Beacon Morris Twin-Flo III Kickspace Heater Blower Motor Replacement Instructions

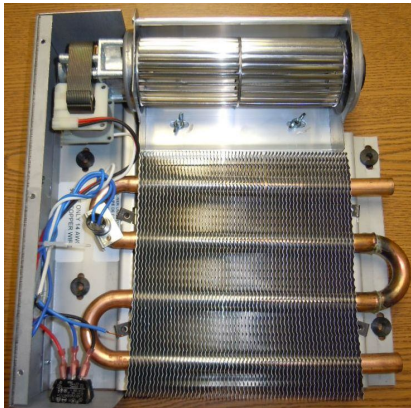

1. Remove electrical box cover (3 screws)
2. Remove heating coil cover (4 screws)

3. Disconnect (pull off) red and black wires from the back of the switch on the unit.
4. Disconnect white wire from neutral wire.

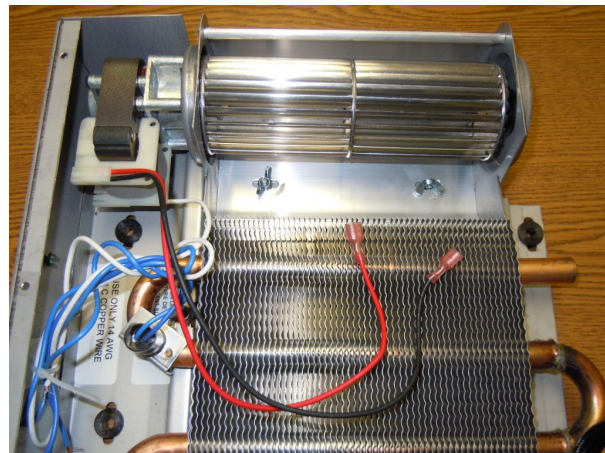


# **TWIN-FLO<sup>III</sup>**



5. Remove 2 wing nuts holding blower in place.

6. Remove blower assembly

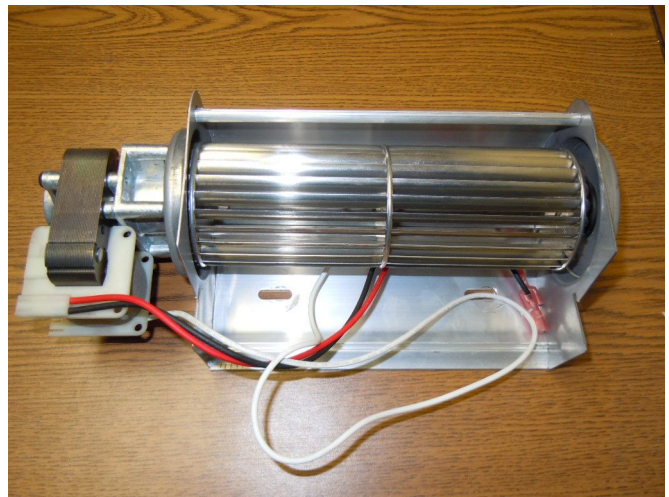

Put new blower motor on.

Tighten wing nuts.

Connect white blower motor wire to neutral wire.

Plug red blower motor wire into far right post of switch (max setting).

Plug black blower motor wire into far left post of switch (min setting).

Replace heating coil cover.

Replace electrical box cover.