



Convactor Installation Instructions


FS & FSG Convactor

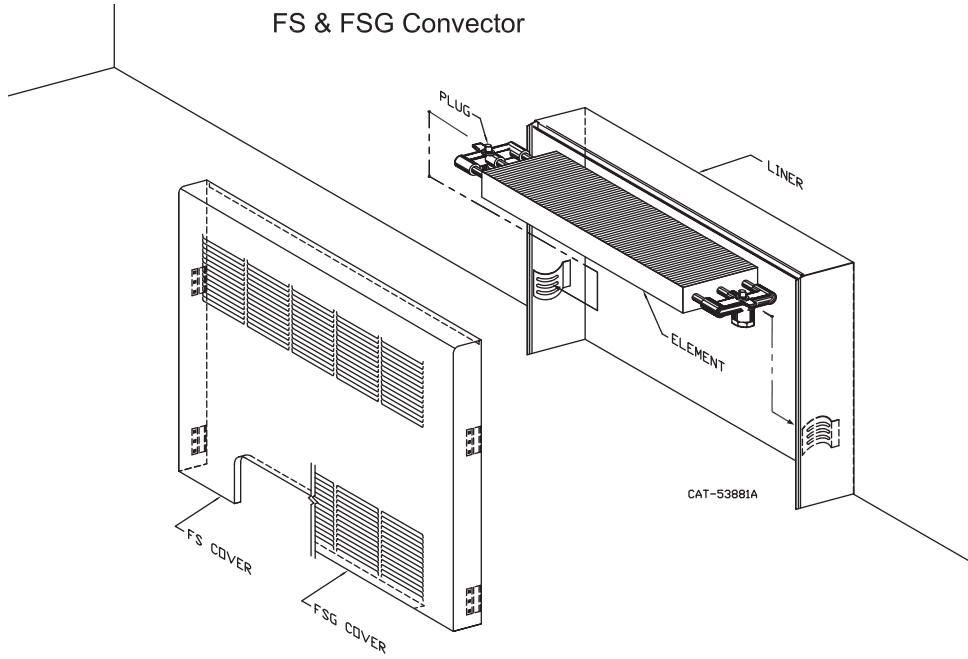


W Convactor

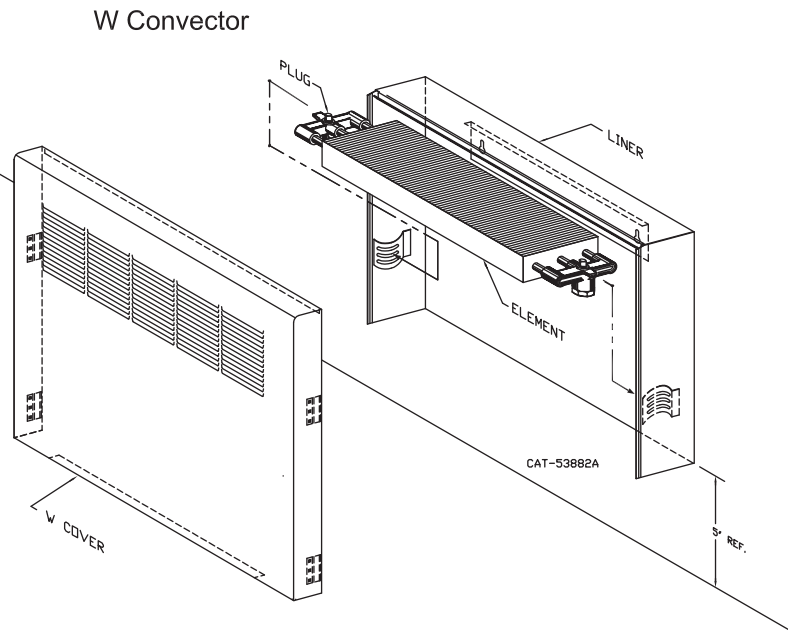


SW Convactor

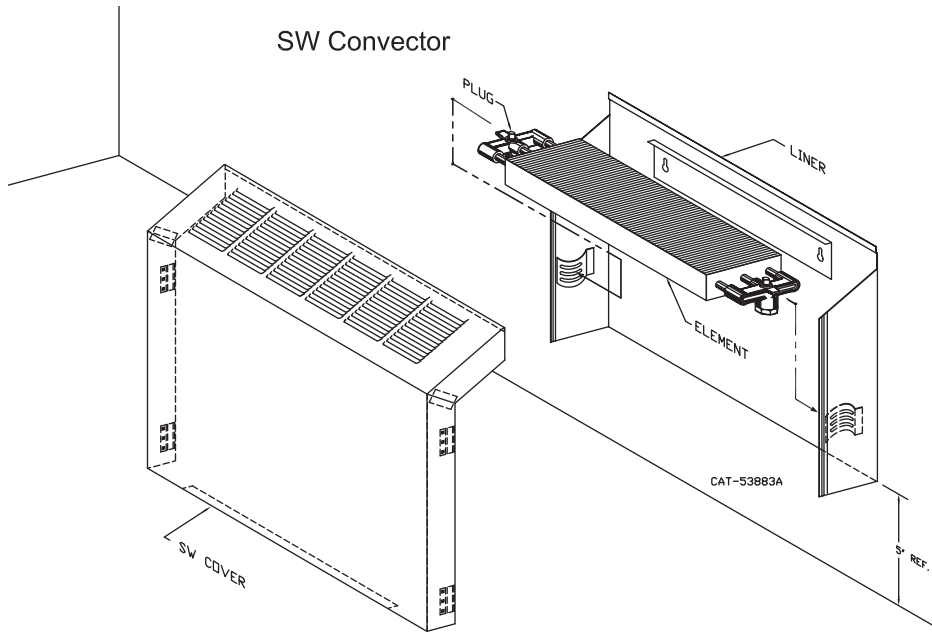


SF & SFG Convactor

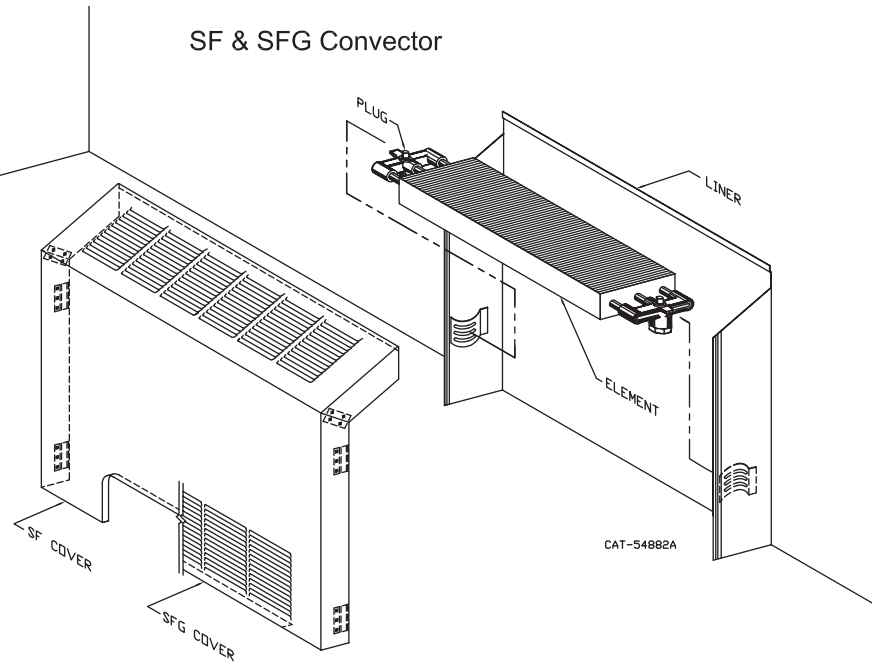


PW & PWG Convector

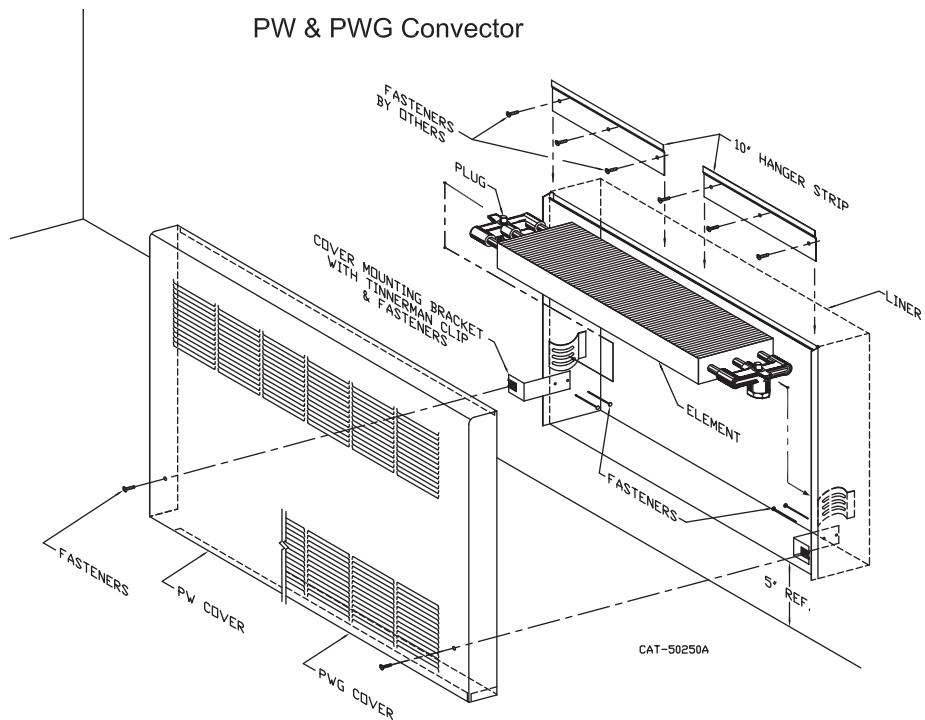

RF & RFG Convector

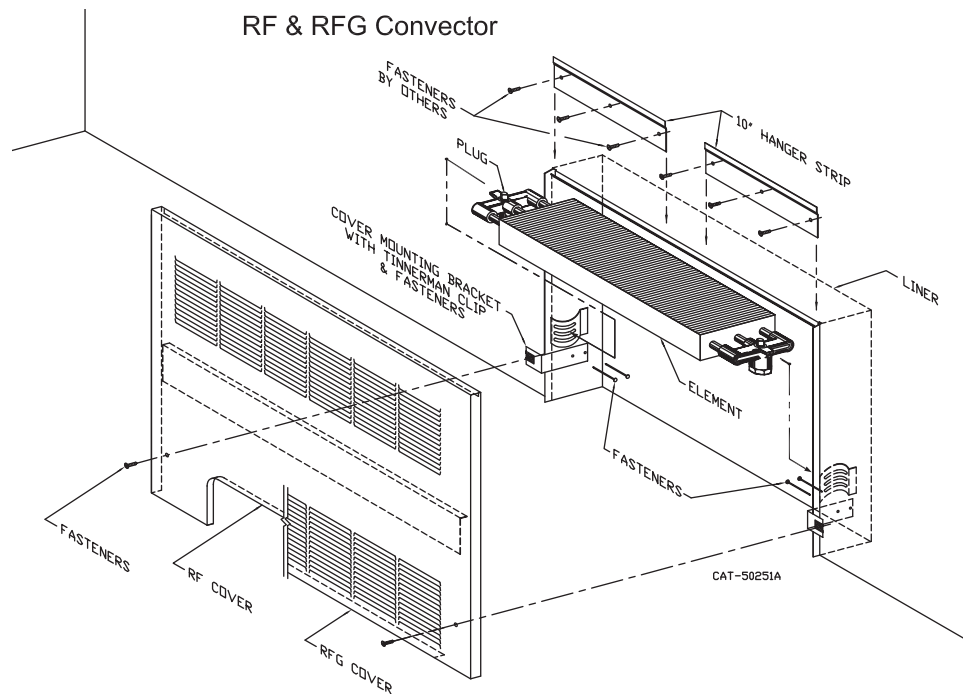

FWG Convector

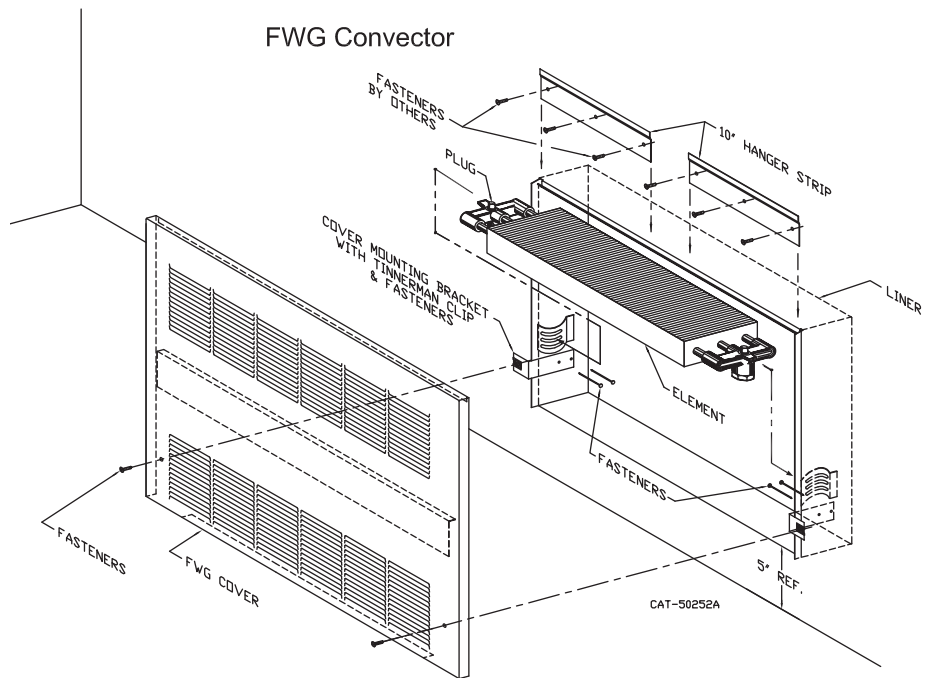

SR & SRG Convector

