


Cabinet Unit Heater  
Option  
126B  
Field Installed

WALL SEAL KIT  
"WALL & CEILING UNITS"

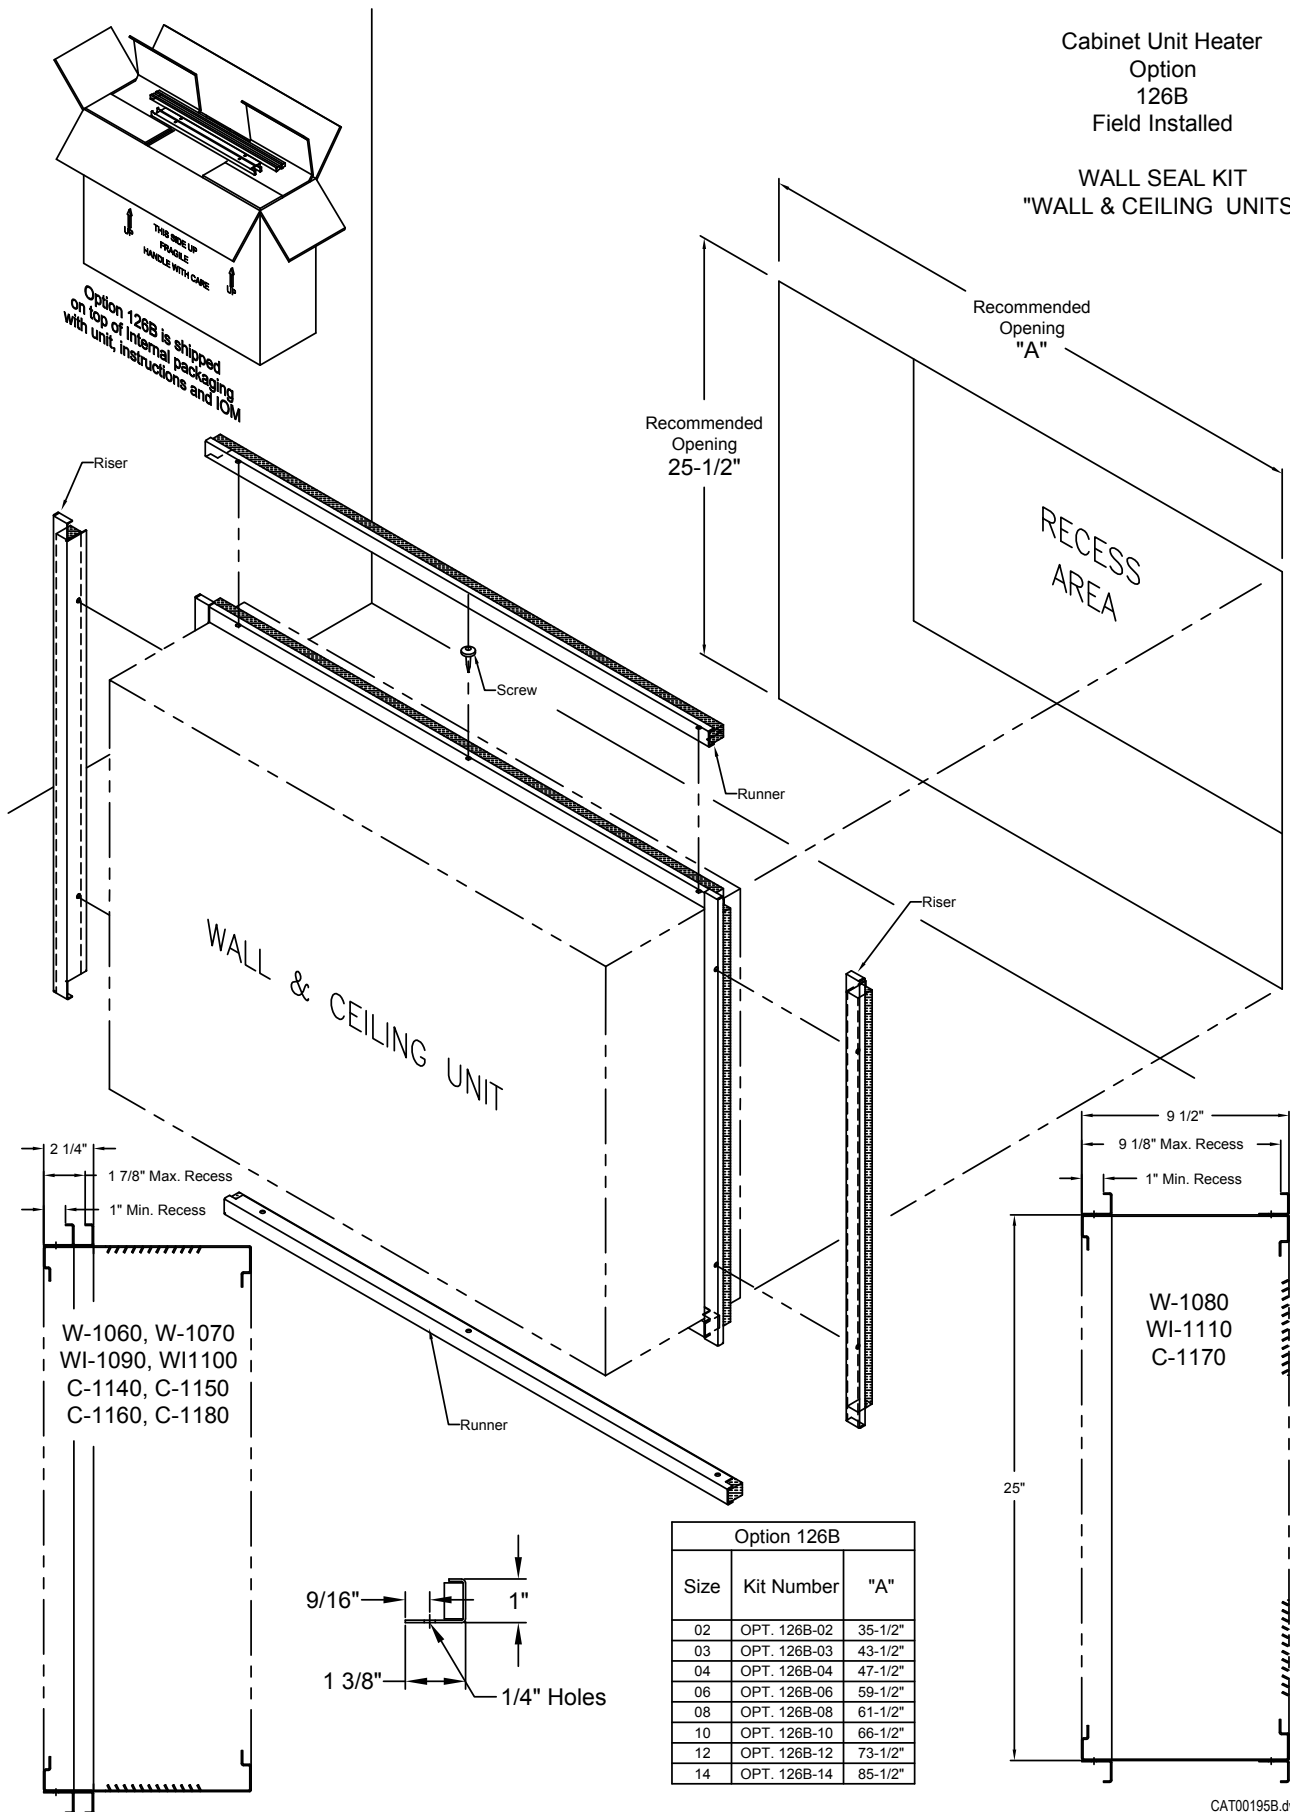

CAT00195B.dwg

# WALL SEAL INSTRUCTIONS

## CABINET UNIT HEATERS

7/16" Projection by 1" Wide Wall Seal Kit

## INSTALLATION INSTRUCTIONS

**PREPARATION:** The design of these cabinets and wall seal frames allows recessing of all models per the Wall Seal schedule (Fig. 1) shown below:

**Fig. 1**

| MODEL | These Models<br>may be Partially<br>or Fully Recessed | These Models<br>may be Partially<br>Recessed only (2 1/4" Max.) |
|-------|-------------------------------------------------------|-----------------------------------------------------------------|
| F     | F-1020, F-1030                                        | F-1000, F-1010                                                  |
| FI    | FI-1050                                               | FI-1040                                                         |
| W     | W-1080                                                | W-1060, W-1070                                                  |
| WI    | WI-1110                                               | WI-1090, WI-1100                                                |
| C     | C-1170                                                | C-1140, C-1150<br>C-1160, C-1180                                |

**STEP 1:** Measure depth unit is to be recessed (usually this is the distance from face of finished wall to back of recess). Add 7/16". Measure this distance from the back of the cabinet and mark the top and side of the cabinet. This will be the location of the exposed face of the wall seal.

**STEP 2:** Position the wall seal top section (and bottom section for wall and ceiling application) with mounting holes against cabinet (overlap edge 1/4" each end). Mark through the pre-punched holes. Using a short 9/64 or 5/32" drill, drill into the cabinet at those marks. DO NOT DRILL INTO THE COIL. Attach using 5/8" long sheet metal screws (furnished).

**STEP 3:** Position the wall seal side sections with mounting holes against the cabinet side with the face of section at line marked in Step 1. Slide section over top (and bottom if applicable) section and attached as in Step 2.