



# PUREPAK™ ELECTRONIC AIR CLEANER INSTALLATION INSTRUCTION


## GENERAL

The PurePak electronic air cleaner is a high-filtration alternative to the standard SpacePak return air box.

## INSTALLATION

To properly install the air cleaner follow the instructions below:

1. **DANGER: Turn off electrical power supply to air handler before servicing. Contact with live electric components can cause shock or death.**
2. Prepare wall, ceiling or other location as per installation manual supplied with the SpacePak fan coil unit, or take measurements from the rear of the air cleaner box and cut opening.
3. Drill a 1/4" hole into the back of sheet metal box.
4. Install the strain-relief grommet into the 1/4" hole.
5. Mount the air cleaner box into prepared opening with (4) field supplied screws (#8 X 3/4").
6. Plug wire connector into power head of air cleaner.
7. Thread 24 VAC wire through grommet in box and connect the (2) wires to the fan circuit at terminals "G" and "C" in electrical control box located at back of fan coil unit.
8. Install the frame/screen assembly using the (4) #8 X 1/2" screws supplied.
9. Place filter media into position in front of wire screen, secure louvered grill over media and latch securely in place.

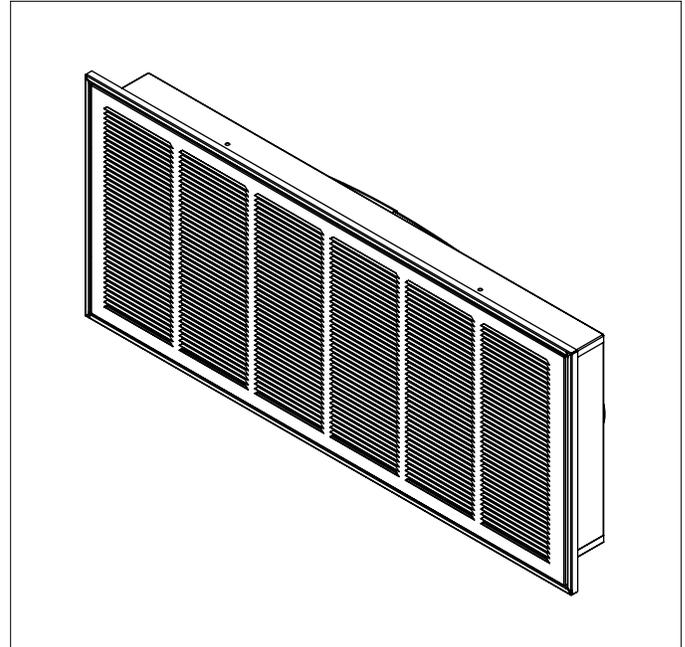

**Critical: Ensure the small white "button" insulator on cover is properly positioned over the electrode protruding through the filter media.**

10. Restore power to fan coil unit. NOTE: LED on power head will illuminate when unit is energized.

11. The media may arc or snap slightly when first installed. This is normal and should not persist after a few hours of operation. If arcing continues or is rapid, remove the media pad and re-position it.

NOTE: Media pads generally last from two to four months. However, it is suggested that the media be inspected and/or replaced after four to six weeks in new installations. This is due to the first-time clean up of contaminants present in the house. **Please advise homeowner of replacement schedule.**

## PUREPAK®

*Clean Air — Anywhere*

260 North Elm Street

Westfield, MA 01085

Tel. 800-465-8558 Fax: 413-564-5815

Canada:

7555 Tranmere Drive

Mississauga, Ontario L5S 1L4, Canada

Tel. 905-672-2991 Fax: 905-672-2883

www.spacepak.com

*A Product of*

**SPACE PAK** 